

## Appliances properties: Attika Feuer AG - Bionic Fire

Master data

Date of entry Jul 26, 2013 Manufacturer Attika Feuer AG Model Bionic Fire Nominal heat output [kW] 5.3 Continuous burning appliance **DIN EN 13240** Type test standard Year of testing 2012 **Test laboratory** Danish Technological Institute 15 **Number of test laboratory** Number of test report 300-ELAB-1813-EN



Flue gas values

	Wood
Flue gas mass flow [g/s]	5.1
Flue gas mass flow [g/s]	169
Necessary flue draught [Pa]	12

Further important characteristics of the appliance

Suitability for installation to a shared flue<sup>1)</sup>

Connectivity to the central heating system

General technical approval for room sealed operation

On behalf of the manufacturer, the HKI Industrieverband e.V. hereby confirms compliance with the respective requirements\* in accordance with 1.BImSchV. The type test report of the fireplace has been submitted to the HKI Industrieverband e.V.

\* A green check mark with a "1" indicates that the requirements of the 1st BImSchV are fulfilled, a green check mark with a "2" indicates that the 2nd level of the 1st BImSchV is fulfilled. A yellow check mark shows that the transitional regulation of the 1st BImSchV is fulfilled and a red line means that the 1st BImSchV is not fulfilled.

<sup>1)</sup> For unsealed operation it is possible to install the appliances to a shared flue system (please see installation manual).

## Evaluation of emission data and efficiency Wood

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	Stufe 2
A - Austrian regulation referred to Art 15a B-VG	<b>4</b>
CH - Swiss clean air act	<b>*</b>
DK - Danish regulation for air pollution from wood burners	<b>*</b>
F - Crédit d'impôt à la transition énergétique	<b>✓</b> 7 <b>☆</b>

## Evaluation of emission data and efficiency Lignite briquettes

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	!
DK - Danish regulation for air pollution from wood burners	I



No symbol means that there are no requirements.

No measuring values are available for this fuel, operation with this fuel is not permitted

Here you will find further information

No information/unknown